





DELUGE VALVE

FLOW-TEK VALVES & CONTROLS INC Going Beyond the Technology

www.flowtekvalves.com; www.delugecontrolvalve.com www.flowagevalves.com; www.controlvalveindia.com E-mail:info@flowagevalves.com, hemal21386@gmail.com



History

The story of Flow-Tek Valves & Controls Inc began more than 20 years ago, when founder Mr. K.B. Patel decided to expand his existing machine shop to begin designing and manufacturing control valves in Ahmedabad, India. He established his company with a vision of commitment to quality and reliability.

Since its modest beginning, Flow-Tek Valves & Controls Inc has maintained that vision while becoming a worldwide leader alongwith India in the valve industry.

Mission Statement

To be recognized as one of the world's most trusted and innovative manufacturer of fire protection equipments by providing our customers highest quality products that combine performance and advanced technology with value pricing achieving 100% customer satisfaction.

Vision

Continue to offer customers top quality products to meet or exceed customer's needs.

We focus on:

* Customer service * Product quality * Product design * Delivery reliability

Values

For more than 20 years, FLOW-TEK VALVES & CONTROLS INC Control Valves has maintained a family-like atmosphere in the workplace that goes hand in hand with family values.

Company founder Mr. K. B. Patel had a mission to produce a quality product in a quality work environment.


Today his son Mr. Hemal Patel and Mr. Jatin Patel continue that mission and uphold several important values both in the workplace and among their client base.

Registration & Certification

FLOW-TEK VALVES & CONTROLS INC is dedicated to quality, as evidenced by their ISO Quality System, UL listings, IBR approvals, NSIC registered, CE.


The company is also dedicated to continual improvement, as proven by their in-house continual improvement department and constant pursuit of new industry approvals.




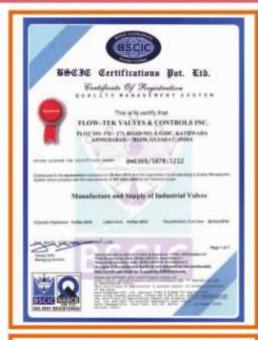





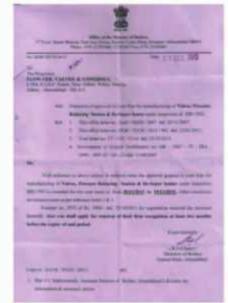

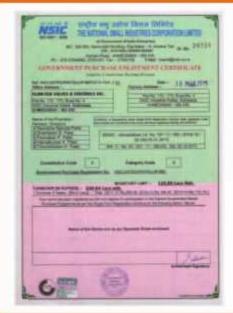















(UL LISTED) DELUGE VALVE [FILE NO.EX16301] MODEL - ACV FTV 100



INDEX

1.	TECHNICAL DATA	3
2.	DESCRIPTION	4
3.	TRIM TYPES	6
4.	RESETTING PROCEDURE	7
5.	SYSTEM TESTING PROCEDURE	8
6.	INSPECTION AND MAINTENANCE	9
7.	VALVE ASSEMBLY	11
8.	VALVES DIMENSION	12
9.	SCHEMATICS	13
10.	GRAPH OF SPRINKLER HEIGHT LIMITATION	21
11.	GRAPH PRESSURE LOSS V/S FLOW	22
12.	DELUGE VALVE SKID	23
13.	ANGLE TYPE DELUGE VALVE	24





TECHNICAL DATA

MODEL ACV FTV 100 : Cast Steel ASTM A 216 WCB

NORMAL SIZE : 50,65,80,100,150,200 NB

SERVICE PRESSURE : 1.4 to 12 Bar (20 to 175 PSI)

THREADED OPENING : BSPT

MOUNTING : Vertical or Horizontal

FACTORY : 31 Kg/sq.cm. (440 PSI)

HYDROSTATIC TEST PRESSURE

FLANGE CONNECTION : ANSI B 16.5 # 150 RF (FF-Optional)

WET PILOT : As per graph in the catalogue

SPRINKLER

HEIGHT LIMITATION

NET WEIGHT : 200 NB - 195 Kg

WITHOUT TRIM 150 NB - 100 Kg

100 NB - 54 Kg 80 NB - 34 Kg

65 NB - 30 Kg 50 NB - 28 Kg

FINISH/PAINT : RAL 3000 (RED COLOR)/FIRE RED IS Confirm to IS5

Shade 536 to IS 2932

APPROVAL : UL Listed (80,100,150 NB)

ORDERING : 1. Size of Valve

INFORMATION 2. Flange specification

3. Valve trim vertical or horizontal

4. Trim type





DESCRIPTION

Deluge Valve are used in conditions that call for quick application of large volumes of water and, for that reason, are often integral components in fire protection system.

Deluge systems deliver large quantities of water over a large area, in a relatively short period of time. They are commonly used in fixed fire protection systems whose pipe system is empty until the deluge valve distributes pressurized water from open nozzles or sprinklers.

Deluge system contain more components and equipment than wet pipe and dry systems. So for that matter they are more complex. Detection systems can include heat, smoke, ultraviolet (UV), or infrared (IR).

VALVE OPERATION

FLOW-AGE Deluge Valve, Model ACV FTV 100 are diaphragm operated, Line Fluid Actuated, Globe Type Straight Pattern Valves. The valve remains closed when line fluid (water is loaded above the diaphragm in the cover chamber and valve opens fully, when line fluid (water) is emptied from the cover chamber.

Fire will activate the heat-sensitive automatic fire sprinkler in the sprinkler heads closest to the fire. The pressurized water/Air will flow from the activated sprinkler heads. Because the fire only activates the sprinkler heads closest to the fire, water damage is minimal. In fact, much less water is used when extinguishing a fire from a fire sprinkler than fire department extinguishment tools. When the fire sprinkler initiates, alarms will sound and continue sounding until the water flow is manually disabled.

TRIM DESCRIPTION

The trims are functionally termed as Wet Actuation trim, Dry Actuation trim, Electric release System, Test and Alarm trim, Drain & Drip Trim as per the method of actuation of the deluge valve. The functionally of these trims is described below.





1. WET ACTUATION SYSTEM

Wet valve sprinkler systems are permanently charge with water and used to protect premises where temperatures are unlikely to fall below freezing point. They are designed to actuate operate electric, and/or hydraulic alarms when there is a steady flow of water into the system that is equivalent to the discharge rate of one or more sprinklers.

The type of sprinkler nozzle, its discharge pattern and flow rate are all pre-determined by the hazard classification of the of the type of fire risk involved. A typical Wet valve sprinkler system comprises of a control valve, sprinkler discharge heads and a dedicated water supply system.

2. DRY ACTUATION SYSTEM

Dry pipe system is a sprinkler system employing automatic sprinklers installed on a piping system containing air or nitrogen under pressure.

This dry pipe valve is used to hold back the water supply and to serve as the water / aire interface. It is designed so that a moderate amount of air pressure will hold back a much greater water pressure. When a fire occurs and enough heat is generated, one or more sprinklers will operate. The system's air pressure will then escape through the open sprinkler(s) and drop to a predetermined level to allow the dry pipe valve to open. Once the dry pipe valve opens, the water supply will be admitted into the sprinkler system piping to fill it and water will discharge from any sprinkler(s) that have operated. Dry pipe systems are used in environments that may be subject to freezing temperature.

3. ELECTRIC RELEASE SYSTEM

To actuate a Deluge valve electrically, a solenoid valve is provided to drain the water from the top chamber of the Deluge valve. A pressure switch is provided to activate an electric alarm, to shut down the desired equipment or to give "Tripped" indication of the Deluge valve. In addition to this a pressure switch can also monitor "Low air pressure" and "Fire condition" when used in dry pilot airline.





4. TEST AND ALARM TRIM

This trim is supplied with a test valve is provided to test the normal operation of the sprinkler alarm bell. The sprinkler alarm can be supplied additionally, which bells on actuation of the Deluge valve.

5. DRAIN AND DRIPTRIM

This consists of main and system drain valve in addition with drip valve.

TRIM TYPES

The trims are designated as following.

WPT = Wet Pilot trim. DPT = Dry Pilot Trim.

1. Type FTDLV-WPT and FTDLV-DPT

This type of trim is basic trim required to operate the deluge valve. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

2. Type FTDLV-WPT-DRN and FTDLV-DPT-DRN

This trim type is a combination of components of the ET trims along with the drip and drain trim. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

3. Type FTDLV-WPT-TST and FTDLV-DPT-TST

This trim type is a combination of components of the ET trims along with the test and alarm trim. In dry pilot trim, an actuator M-100 is provided with optional Pneumatic Reset Device. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.

4. Type FTDLV-WPT-TST-DRN and FTDLV-DPT-TST-DRN

This trim type is a combination of components of the ET trim along with the test and alarm trim as well as the drip and drain trim. A solenoid valve for electric remote actuation and pressure switch for sensing & annunciation are optional.





TRIM MODEL NO.	DESCRIPTION	TRIM MODEL NO.
FTDLV-DPT	Basic Dry Pilot Trim	VERTICAL
FTDLV-WPT	Basic Wet Pilot Trim	VERTICAL
FTDLV-DPT-TST	Basic Dry Pilot + Test Alarm Trim	VERTICAL
FTDLV-WPT-TST	Basic Wet Pilot + Test Alarm Trim	VERTICAL
FTDLV-DPT-DRN	Basic Dry Pilot + Drip + Drain Trim	VERTICAL
FTDLV-WPT-DRN	Basic Wet Pilot + Drip + Drain Trim	VERTICAL
FTDLV-DPT-TST-DRN	Basic Dry + Test Trim + Drip + Drain Trim	VERTICAL
FTDLV-WPT-TST-DRN	Basic Wet + Test Trim + Drip + Drain Trim	VERTICAL
FTDLV-DPT	Basic Dry Pilot Trim	HORIZONTAL
FTDLV-WPT	Basic Wet Pilot Trim	HORIZONTAL
FTDLV-DPT-TST	Basic Dry Pilot + Test Alarm Trim	HORIZONTAL
FTDLV-WPT-TST	Basic Wet Pilot + Test Alarm Trim	HORIZONTAL
FTDLV-DPT-DRN	Basic Dry Pilot + Drip + Drain Trim	HORIZONTAL
FTDLV-WPT-DRN	Basic Wet Pilot + Drip + Drain Trim	HORIZONTAL
FTDLV-DPT-TST-DRN	Basic Dry + Test Trim + Drip + Drain Trim	HORIZONTAL
FTDLV-WPT-TST-DRN	Basic Wet + Test Trim + Drip + Drain Trim	HORIZONTAL

RESETTING PROCEDURE

- 1. Close the upstream side stop valve provided below the deluge valve to cease the flow of water.
- Open both the drain valves/ drain plugs and close when the flow of water has ceased.
- Close the release device/replace the Sprinkler if release was through Sprinkler/QB Detector.
- Inspect and release if required, or close the section of the detection system subjected to "Fire condition".
- In case of dry pilot detection system, open the air supply valve to build-up air pressure. Open the priming valve fully. Open the upstream side of the stop valve provided below the Deluge valve. No water should flow into the system.
- Where priming shut off valve (optional) is provided for resetting, then the water need to be drained from upstream side of valve.

NOTE: The valve can be reset without undergoing above procedure, by just closing/replacing the release device as valve is auto reset type. The reset time may be long or cause vibration while closing depending on back pressure at the outlet of the valve.





CAUTION

- Do not close the downstream and upstream stop valves, while the system is in service.
- The releasing device must be maintained in open position, when actuated, to prevent the deluge valve from closure if anti shut off valve is not provided.
- While using a Deluge valve in the wet pilot system, the height and length of the wet pilot detection line is to be limited, as shown in the wet pilot sprinkler height limitation graph.
- Do not connect the Sprinkler Alarm outlet drain line to close a common drain as it may create back pressure and Sprinkler Alarm may not function.
- Deluge valve must have support to absorb sudden opening or closing vibration shock to the piping.
- To avoid water damage, take precautions when opening the water supply main control valve, since water will flow from all open system valves.
- The responsibility of maintenance of the protection system & devices in proper operating condition lies with the owner of the system.
- Deluge Valve & its trim shall be maintained at a minimum temperature of 4°C, Heat tracing is not permitted.
- Deluge Valve must be used in pressurized system.

SYSTEM TESTING PROCEDURE

- Keep the upstream side of the stop valve partially open. To avoid water flow to system side close the system side stop valve. This valve is to be kept in open position after the testing is completed.
- Let any of the release devices to trip. This will result in sudden drop of water pressure in the deluge valve
 top chamber which in turn will open the deluge valve. Close the upstream side stop valve immediately.
- Reset the valve as per the procedure given under heading "RESETTING PROCEDURE FOR THE DELUGE VALVE".





INSPECTION AND MAINTENANCE

Installed system piping network must be flushed properly before placing the Deluge valve in service. A qualified and trained person must commission the system. After few initial successful tests, an authorized person must be trained to perform inspection and testing of the system. It is recommended to have regular inspection and test run of the system as per NFPA guideline or in accordance to the organization having local jurisdiction.

1. WARNING

Inspection and testing is to be carried out only by authorized and trained personnel. DO NOT TURN OFF the water supply or close any valve to make repair(s) or test the valve, without placing a roving fire patrol in the area covered by the system. Also inform the local security personnel and central alarm station, so that there is no false alarm signal. It is recommended to carry out physical inspection of the system at least twice in a week. The inspection should verify that all the control valves are in proper position as per the system requirement and that there are no damages to any component. The frequency of inspections must be increased in the presence of contaminated water supplies, corrosive/ scaling water supplies, and corrosive atmospheres.

2. NORMAL CONDITION

- A. All main valves are open and are sealed with tamper proof seal.
- B. Drain valves must be kept closed.
- No leak or drip is detected from the drip valve.
- D. All the gauges except the system side water pressure gauge, should show the required pressure.
- E. There should be no leakage in the system.

3. NORMAL CONDITION TEST

- The system should be checked for normal condition at least once in a week.
- B. Test the sprinkler alarm bell or electric alarm by turning the alarm test valve to the test position. The alarm should sound. This test should be carried out at least once in a week.





- C. Depress the drip valve knob. Significant accumulation indicates a possible seat leakage
- D. Conduct the water flow test as per the procedure of system testing at least once a month.

4. PERIODIC CHECK

Conduct the water flow test by actuating few of the release devices provided in the system. Clean all strainer(s) and priming line restriction. This test is to be carried out at least once in three months.

ABNORMAL CONDITION

1. ALARM FAILS TO SOUND

- A. Check for any obstruction in the alarm test line, make certain that the sprinkler alarm is free to operate.
- B. If an electric alarm is provided, check the electrical circuitry to the alarm.

2. FALSE TRIPS

- A. Check for clogging in priming line, restriction orifice check valve, priming valve & strainer.
- Leakage in the release system.
- C. The deluge air panel orifice clogged or low supply Pressure.

3. LEAKAGE THROUGH THE DELUGE VALVE


- A. Damaged deluge valve seat or obstruction on the seat face by foreign object.
- Leakage in release system.
- C. Partly clogged priming line restriction orifice check valve.
- D. Low air pressure on release system line or leakage in release system





VALVE ASSEMBLY

SIZE 50, 65, 80, 100, 150, 200 NB

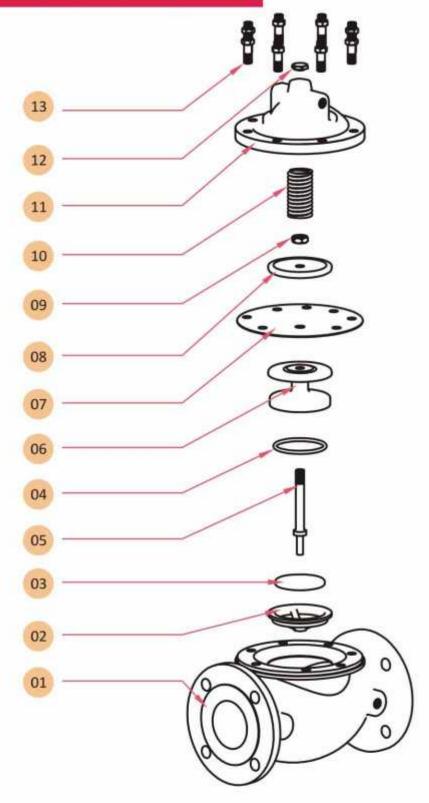






VALVE DIMENSION

SIZE 50, 65, 80, 100, 150, 200 NB

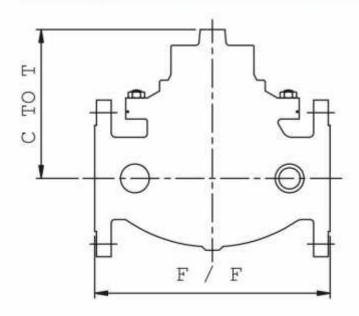


Valve Nominal Size	F/F	стот
50 NB	237.0	122.0
65 NB	241.0	144.0
80 NB	305.0	167.0
100 NB	381.0	228.0
150 NB	508.0	301.5
200 NB	645.0	395.0

NO.	PART NAME	MATERIAL
01	BODY	ASTM A 216 GR. WCB
02	SEAT	ASTM A 351 GR. CF8
03	RETAINER PLATE	AISI 304
04	QUAD RING SEAT	BUNA-N
05	STEM	S.S 304
06	RETAINER	S.S 304
07	DIAPHRAGM	BUNA-N
08	DIAPHRAGM WASHER	S.S 304
09	STEM NUT	S.S 304
10	SPRING	SPRING STEEL/S.S 304
11	COVER	ASTM A 216 GR. WCB
12	PLUG	STEEL PLATED
13	STUD & NUT	ASTM A 194 GR. 2H / ASTM A 193 GR. B7




SCHEME FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING

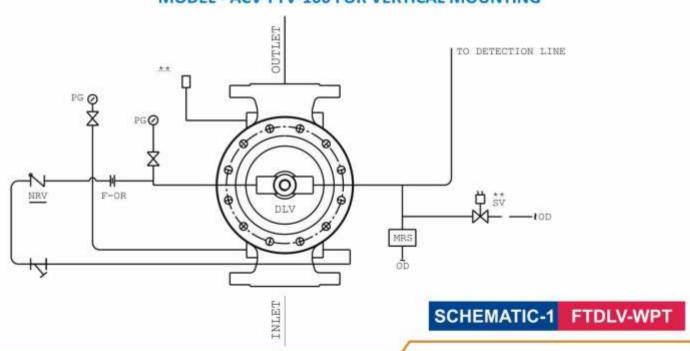

SCHEME FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING

TO DETECTION LINE

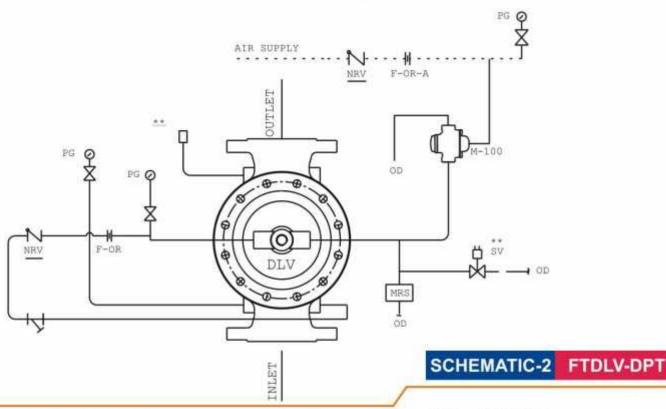

DLV - DELUGE VALVE

SV - SOLENOID VALVE

G - SPRINKLER ALARM GONG MRS - MANUAL RELEASE STATION

F-OR - FIXED ORIFICE

DV - DRAIN VALVE

→ VALVE

- BY USER

.. - OPTIONAL

- STRAINER

OD - OUT TO DRAIN

M-100 - PILOT VALVE

F-OR-A - FIXED ORIFICE


PG - PRESSURE GAUGE

NRV - NON RETURN VALVE


- LIFT CHECK VALVE

PSW - WATER FLOW PRESSURE SWITCH

SCHEME FOR WET PILOT BASIC TRIM FOR DELUGE VALVE **MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING**

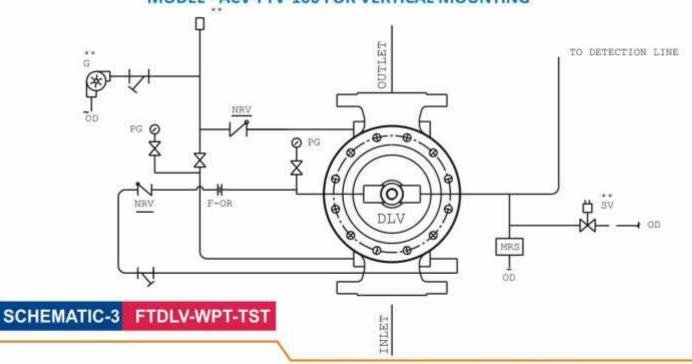

SCHEME FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING

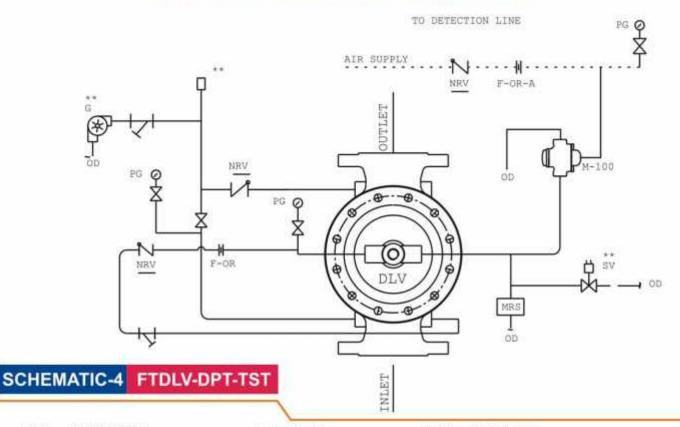

DLV - DELUGE VALVE

SV - SOLENOID VALVE

- SPRINKLER ALARM GONG MRS - MANUAL RELEASE STATION

F-OR - FIXED ORIFICE

- DRAIN VALVE

- BY USER

- OPTIONAL

- STRAINER OD - OUT TO DRAIN M-100 - PILOT VALVE

F-OR-A - FIXED ORIFICE

- PRESSURE GAUGE PG

NRV NON RETURN VALVE

- LIFT CHECK VALVE


PSW - WATER FLOW PRESSURE SWITCH



SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING



SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING

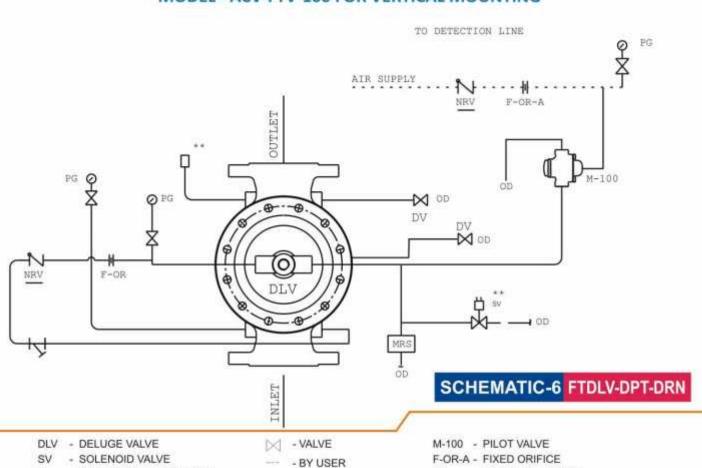

- OPTIONAL

OD - OUT TO DRAIN

- STRAINER

PG

NRV

PSW

- PRESSURE GAUGE

NON RETURN VALVE

- LIFT CHECK VALVE

- WATER FLOW PRESSURE SWITCH

- SPRINKLER ALARM GONG


MRS - MANUAL RELEASE STATION

F-OR - FIXED ORIFICE


- DRAIN VALVE



SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE **MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING**

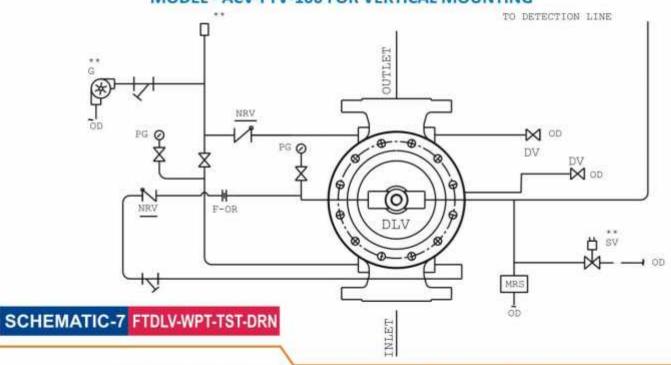

SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE **MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING**

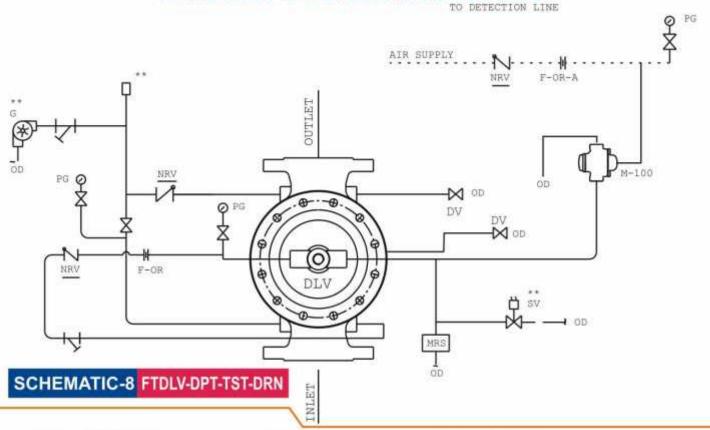

DLV - DELUGE VALVE

- SOLENOID VALVE

- SPRINKLER ALARM GONG MRS - MANUAL RELEASE STATION

F-OR - FIXED ORIFICE

- DRAIN VALVE

- BY USER

- OPTIONAL

- STRAINER

OD - OUT TO DRAIN

M-100 - PILOT VALVE

F-OR-A - FIXED ORIFICE

PG PRESSURE GAUGE


NRV NON RETURN VALVE

- LIFT CHECK VALVE


PSW - WATER FLOW PRESSURE SWITCH



SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING

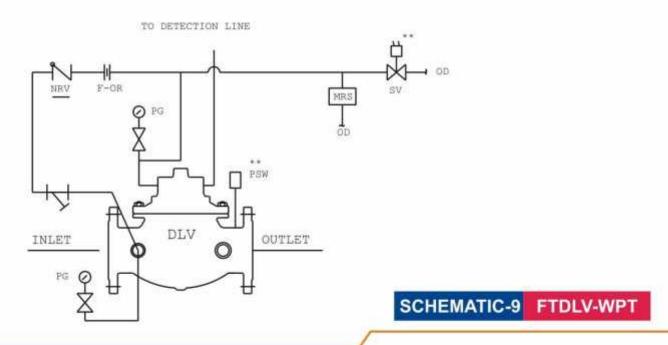

SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR VERTICAL MOUNTING

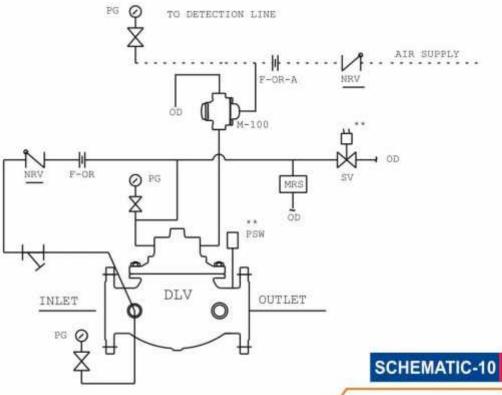

DLV - DELUGE VALVE

- SOLENOID VALVE

- SPRINKLER ALARM GONG MRS - MANUAL RELEASE STATION

F-OR - FIXED ORIFICE

DV - DRAIN VALVE

- VALVE

- BY USER

- OPTIONAL

- STRAINER

OD - OUT TO DRAIN

FTDLV-DPT

M-100 - PILOT VALVE

F-OR-A - FIXED ORIFICE


PG - PRESSURE GAUGE

NRV - NON RETURN VALVE 4 - LIFT CHECK VALVE

- WATER FLOW PRESSURE SWITCH PSW




SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR HORIZONTAL MOUNTING

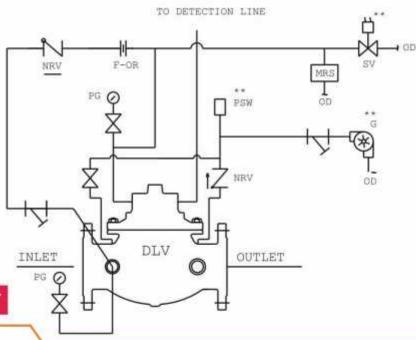

SCHEMATIC-11 FTDLV-WPT-TST

SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR HORIZONTAL MOUNTING

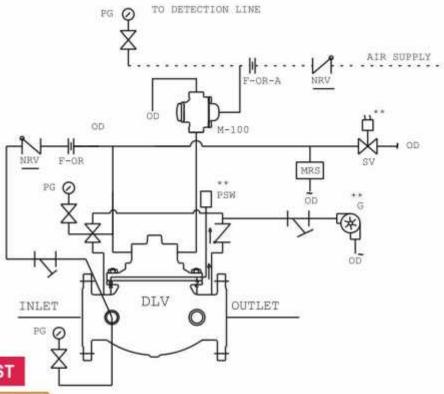

SCHEMATIC-12 FTDLV-DPT-TST

DLV - DELUGE VALVE

- SOLENOID VALVE

- SPRINKLER ALARM GONG MRS - MANUAL RELEASE STATION

F-OR - FIXED ORIFICE DV - DRAIN VALVE

M-100 - PILOT VALVE

- BY USER

F-OR-A - FIXED ORIFICE

- OPTIONAL


PG - PRESSURE GAUGE NRV - NON RETURN VALVE

- STRAINER


19 - LIFT CHECK VALVE

- WATER FLOW PRESSURE SWITCH **PSW** OD - OUT TO DRAIN

SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR HORIZONTAL MOUNTING

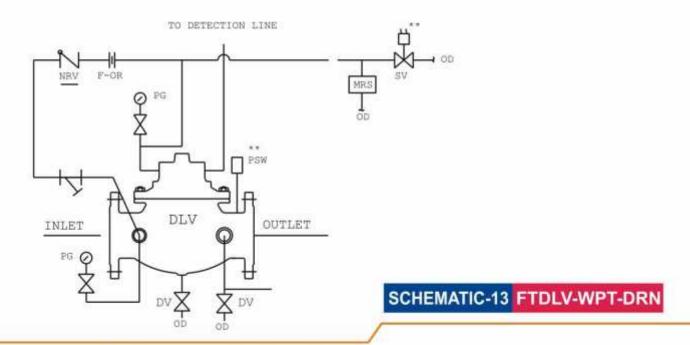

SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR HORIZONTAL MOUNTING

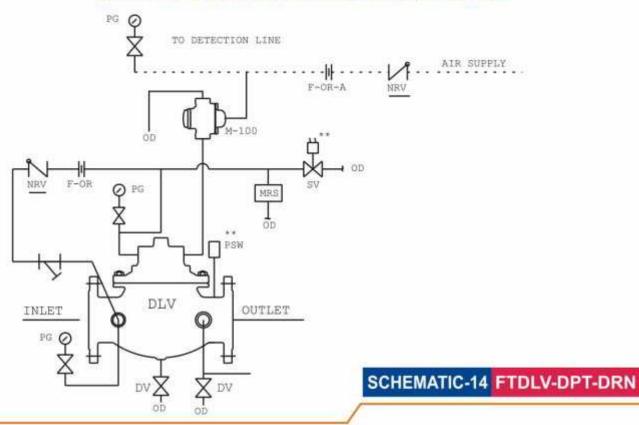

DLV - DELUGE VALVE

SV - SOLENOID VALVE

G - SPRINKLER ALARM GONG

MRS - MANUAL RELEASE STATION

F-OR - FIXED ORIFICE

DV - DRAIN VALVE

→ VALVE

- BY USER

.. - OPTIONAL

- STRAINER

OD - OUT TO DRAIN

M-100 - PILOT VALVE

F-OR-A - FIXED ORIFICE


PG - PRESSURE GAUGE

NRV - NON RETURN VALVE


- LIFT CHECK VALVE

PSW - WATER FLOW PRESSURE SWITCH

SCHEMATIC FOR WET PILOT BASIC TRIM FOR DELUGE VALVE **MODEL - ACV-FTV-100 FOR HORIZONTAL MOUNTING**

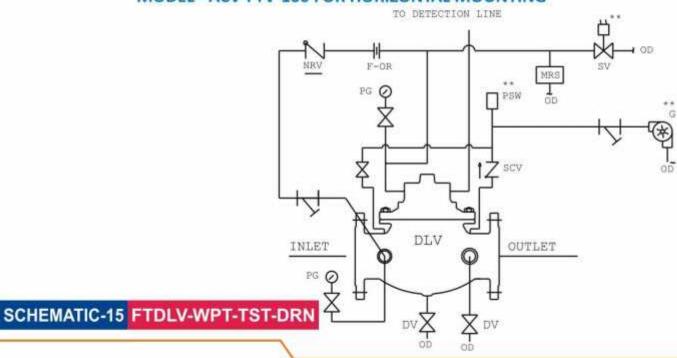

SCHEMATIC FOR DRY PILOT BASIC TRIM FOR DELUGE VALVE MODEL - ACV-FTV-100 FOR HORIZONTAL MOUNTING

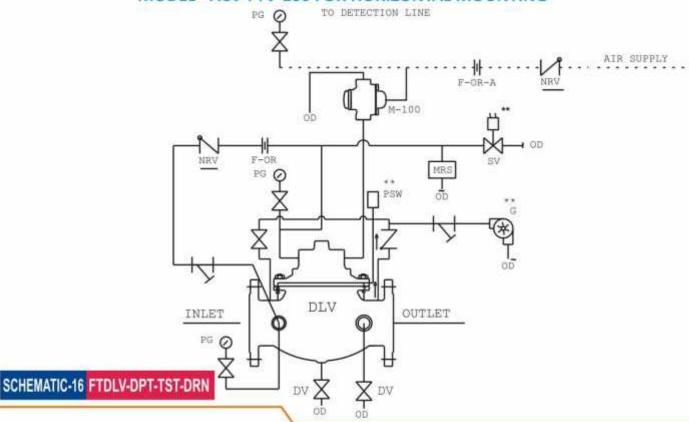

DLV - DELUGE VALVE

- SOLENOID VALVE

- SPRINKLER ALARM GONG MRS - MANUAL RELEASE STATION

F-OR - FIXED ORIFICE

- DRAIN VALVE

- BY USER

- OPTIONAL

- STRAINER

OD - OUT TO DRAIN

M-100 - PILOT VALVE

F-OR-A - FIXED ORIFICE

PG - PRESSURE GAUGE

NRV NON RETURN VALVE


- LIFT CHECK VALVE

PSW - WATER FLOW PRESSURE SWITCH




SPRINKLER HEIGHT LIMITATION


ACV FTV 100 - 80NB

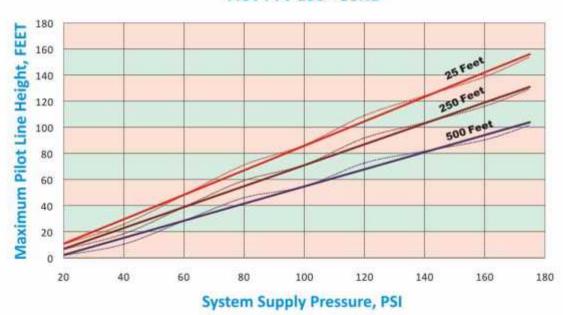


ACV FTV 100 - 100NB

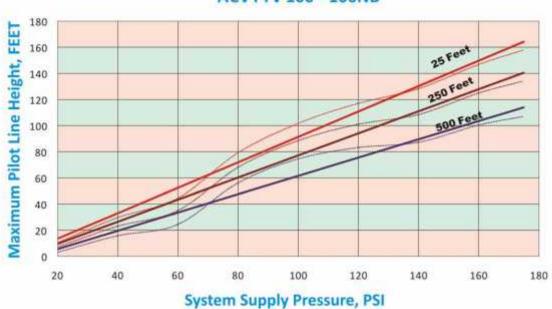



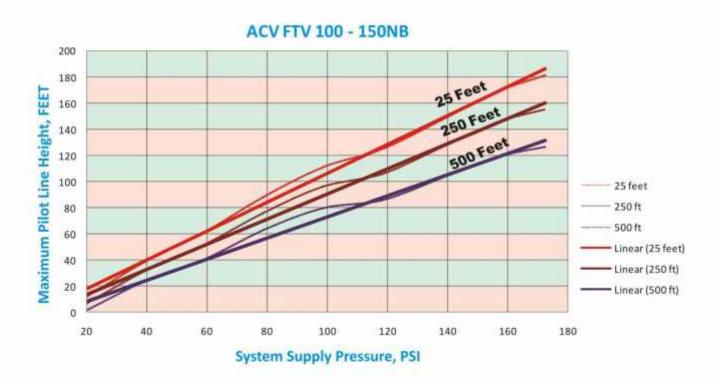

NORMAL PRESSURE LOSS V/S FLOW

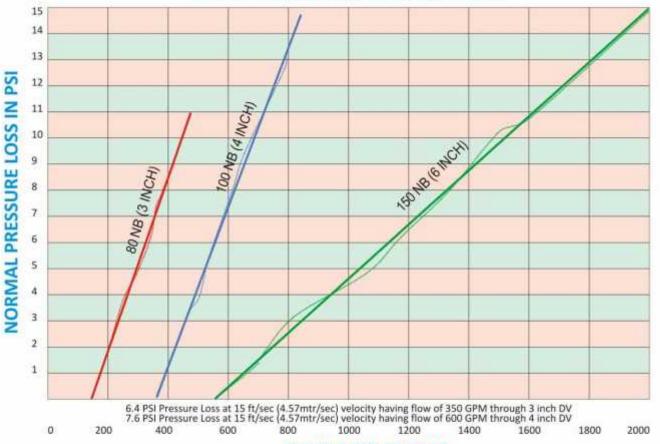



DELUGE VALVE SKID

PRODUCT OVERVIEW

Flowage make Deluge Valve SKID having models integrated pre-assembled open skid mounted of frame. Other model having Pre-assembly with pre-wired and water connection with flanges in close cabinet. This Skid also having inlet outlet and bypass line with accessories like pressure switches solenoid and drain facilities is cabinet mounted.



- UL approved Deluge valve is installed in the Skid
- Isolation butterfly valves in inlet and outlet and bypass line
- Pressure switch, solenoid valve mounted, pre-wired & terminated available in junction box

TECHNICAL DATA

- Deluge Valve Skid Model FTV ACV 300
- Size 50, 80, 100, 150 & 200 mm (2", 3", 4", 6" & 8")
- Actuation type Dry Pilot, Wet Pilot, Electric Release, Manual Release Trim, Test Alarm
- M.O.C. Cast Iron, Cast Steel, Alloy Steel Construction
- Service pressure 1.4 to 12 bar (20 to 175 PSI)
- Mounting Horizontal
- Flanged connection dimensions to ANSI B 16.5
- Finish RAL 3000 (Red Colour)
- UL Under Process
- Ordering Information Size, Model, Trim Type with specified solenoid voltage.


* For more details you can contact us:

ANGLE TYPE DELUGE VALVE MODEL - ACV FTV 200

Flow age make Angle Type Deluge Valve is known as a system control valve in a deluge system, used for fast application of water in a spray system.

- · Fast application of water in spray, pre-action and foam system
- Simple and maintenance free design
- · Diaphragm operated with rubber to metal drip-tight positive sealing
- Auto reset facilities
- Service without removal from line

NO.	PART NAME	MATERIAL
01	COVER	ASTM A 216 GR. WCB
02	BEARING COVER	S.S 304
03	SPRING	S.S 304
04	NUT, STEM	S.S 304
05	WASHER, DIAPHRAGM	ASTM A 351 GR CF 8
06	STUDS	ASTM A 193 GR.B7
07	NUTS	ASTM A 194 GR.2H
08	RETAINER PLATE	ASTM A 351 GR CF 8
09	BODY	ASTM A 216 GR. WCB
10	RETAINER, QUADRING	ASTM A 351 GR CF 8
11	STEM	S.S 316
12	SEAT	ASTM A 351 GR CF 8
13	SPACER	S.S 304
14	DIAPHRAGM	BUNA-N
15	QUAD RING SEAT	BUNA-N
16	GASKET SEAT	BUNA-N
17	O-RING, STEM	BUNA-N
18	PLUG	C.S

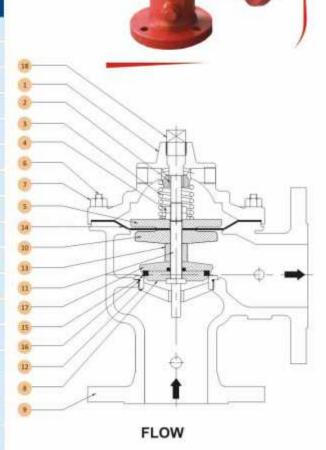

TECHNICAL DATA

- Angle Deluge Valve Model FTV ACV 200
- Size-50, 80, 100, 150 & 200 mm (2", 3", 4", 6" & 8")
- Actuation type Dry Pilot, Wet Pilot, Electric Release, Manual Release Trim, Test Alarm
- M.O.C. Cast Iron, Cast Steel, Alloy Steel Construction
- Service pressure 1.4 to 12 bar (20 to 175 PSI)
- Mounting Vertical inlet and Horizontal outlet
- Flanged connection dimensions to ANSI B 16.5, class 150
- Finish RAL 3000 (Red Colour)
- UL Under Process
- Ordering Information Size, Model, Trim Type with specified solenoid voltage
- * For more details you can contact us :

CLIENTS LIST





FLOW-TEK VALVES & CONTROLS INC

PLOT NO. 172-173, ROAD NO. 4, KATHWADA G.I.D.C., KATHWADA,

AHMEDABAD - 382 430. GUJARAT, INDIA.

Phone: 079-22900219, 079-22900220, Mobile: +91 - 9824080899, 9824539702.

E-mail: info@flowagevalves.com; hemal21386@gmail.com