


FLOAT VALVE (ON/OFF) WITH ADJUSTABLE HIGH/LOW LEVEL FT-110-14

VALVE FUNCTION

- VALVE OPENS WHEN FLOAT REACHES LOWER LEVEL STOP (ADJUSTABLE)
- VALVE CLOSURES WHEN FLOAT REACHES HIGH LEVEL STOP (ADJUSTABLE)
- HIGH & LOW LEVEL ADJUSTMENTS ALLOWS FOR CALCULATED DRAW DOWN

 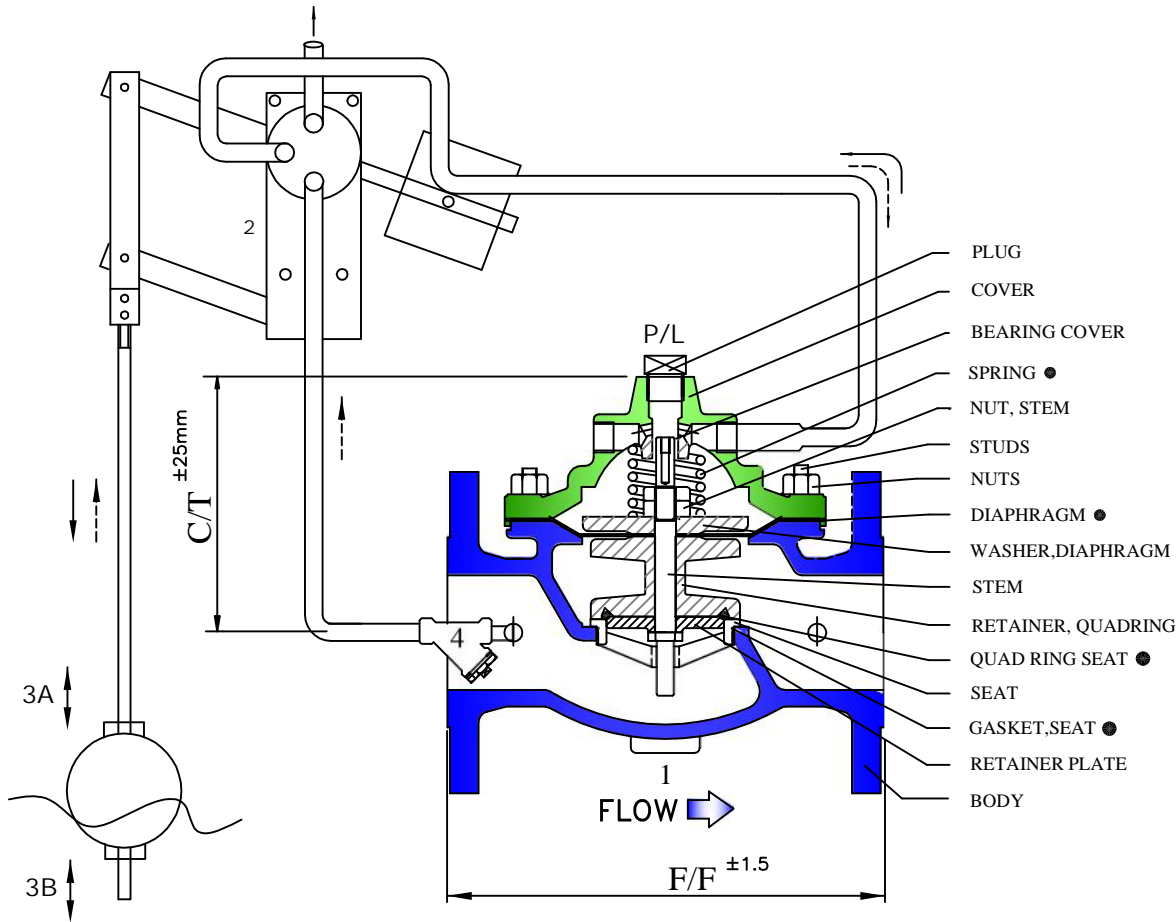


● RECOMMENDED SPARE

VALVE SIZE - INCH	1"	1-1/2"	2"	3"	4"	6"	8"	10"	12"	14"	16"
VALVE SIZE - mm	25	40	50	80	100	150	200	250	300	350	400
F/F (150 ANSI)	152	179	238	305	381	508	645	756	864	991	1051
C/T Max.-F100	75	115	140	175	220	305	400	480	530	570	665

COMPONENTS

- 1 - BASIC VALVE
- 2 - FIG.10-13 FLOAT PILOT
- 3 - LEVEL ADJUSTMENT STOPS
A - UPPER LEVEL
B - LOWER LEVEL
- 4 - STRAINER-'Y' TYPE



FLOW-TEK VALVES & CONTROLS INC

PLOT NO: 172-173, ROAD NO. 4, G.I.D.C.,
KATHWADA, AHMEDABAD - 382430
(M) : 09824080899, 09824539702
PHONE : (079) 22900220, 22900219
E-MAIL : info@flowagevalves.com, hemal21386@gmail.com
url : www.delugecontrolvalve.com, www.flowagevalves.com
AN ISO 9001:2008 CERTIFIED COMPANY